

# TELKI' ACCESSORY SHOCK ABSORBER KIT

USER MANUAL



New Table Concept

NTC srl - Sales Office

# SUMMARY

<b>1. INTRODUCTION</b>	<b>3</b>
<b>2. PACKAGE CONTENT</b>	<b>3</b>
<b>3. WARNINGS</b>	<b>3</b>
WALL STRESS	<b>3</b>
<b>4. ASSEMBLY</b>	<b>3</b>
<b>5. WARRANTY</b>	<b>6</b>

## 1. INTRODUCTION

Dear Customer, thank you for choosing the Telki table Shock absorber kit

We are confident that you will appreciate the value of our product and enjoy the convenience of a smooth and controlled closure of your New Concept Table.

## 2. PACKAGE CONTENT

H - Shock absorber (1)


I - Shock absorber table mounting plate (1)

L - Shock absorber wall mounting plate (1)

M - Table mounting plate screws (2)

N - Dowels (2)

O - Wall mounting plate screws (2)

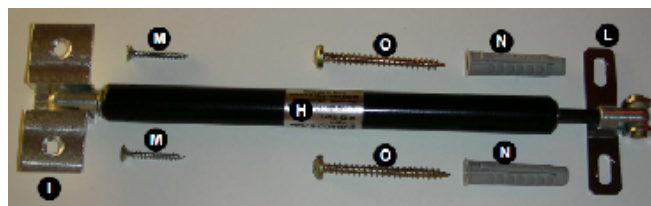

**WARNING!** The screws and dowels (8 mm diameter) we provide are suitable for walls made of solid bricks or concrete. In all other cases you must use dowels and screws appropriate for the wall in question.

## 3. WARNINGS

### ***WALL STRESS***

The NTC srl ensures the robustness of the shock absorber, but is not responsible for any failure due to the wall or to the mounting to the wall.

## 4. ASSEMBLY

1. Fix the shock absorber to the table top by fastening the table mounting plate to the tabletop with the two table mounting plate (wood) screws M (Fig. 1).

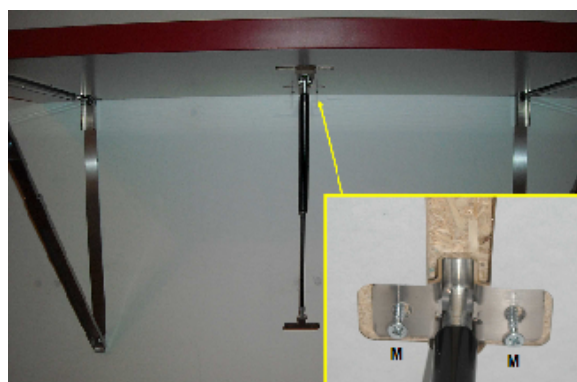


Fig. 1

2. Fully extend the shock absorber

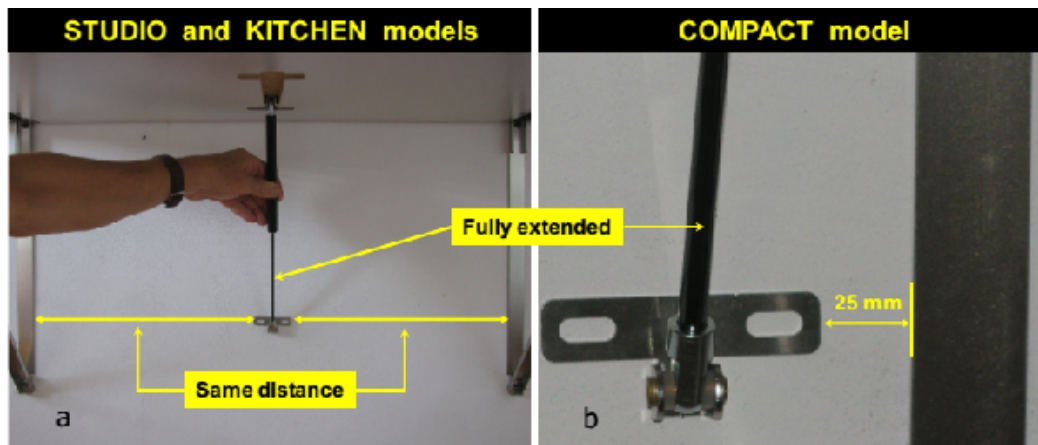


Fig. 2

3. With the shock absorber fully extended position the “wall mounting plate” against the wall in the following ways:
  - **KITCHEN and STUDIO models** - horizontally centered between the two FastLeg structures (Fig. 2a).
  - **COMPACT model** - at about 25 mm from the FastLeg structure (Fig. 2b) in order to have the shock absorber parallel to the FastLeg structure.

**IMPORTANT:** the “wall mounting plate” has to be mounted as shown in Fig 3a. Mounting the “wall mounting plate” upside down as shown in Fig 3b, will cause the plate to bend and the piston shaft will break.

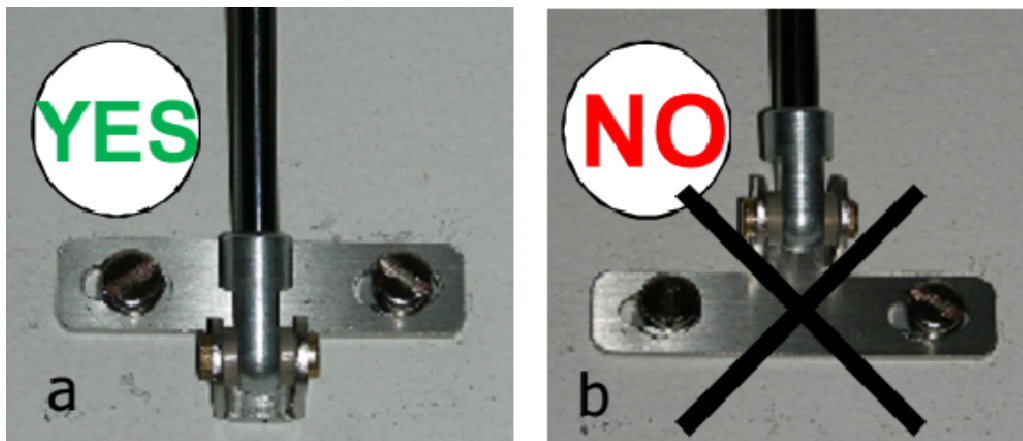


Fig. 3

4. Mark with a pencil the two “wall mounting plate” slots paying attention to keep the plate horizontal.
5. Mark the holes to drill 3mm higher than the slot position. To do it, follow the procedure illustrated in Fig. 4a, 4b, 4c and 4d.

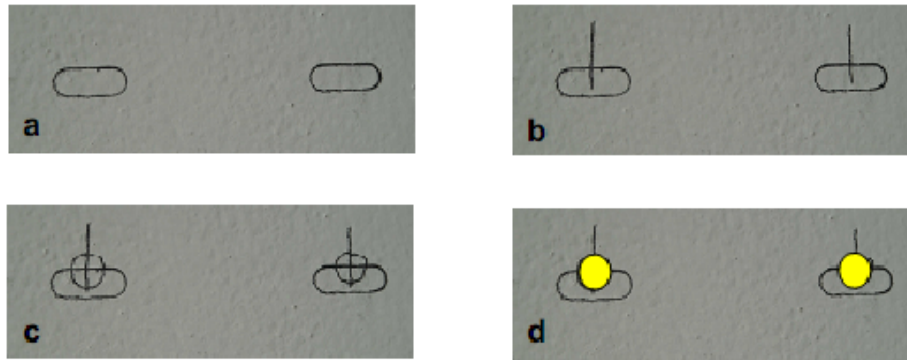


Fig. 4

6. Drill the holes using a 8mm bit (Fig. 5).

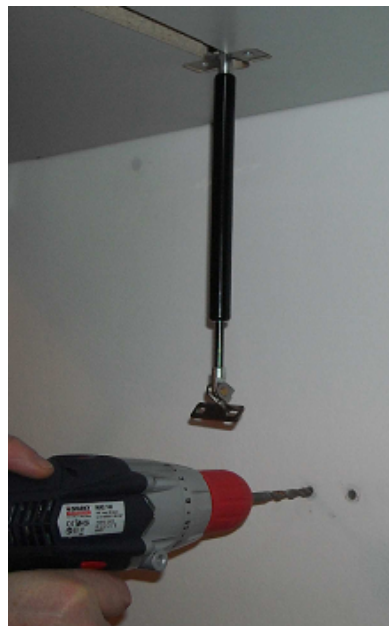


Fig. 5

7. Insert the dowels into the holes.
8. Screw the shock absorber wall mounting plate as shown in the figure (Fig. 6) with the wall mounting plate (concrete) screws.



Fig. 6

## 5. WARRANTY

The warranty is valid for two years from date of shipment of the product and covers only defective parts or breakage due to production defects. The warranty does not cover breakage or damage due to improper use of the table. The broken parts will be replaced free of charge. The shipping expenses are the responsibility of the customer.

To make a claim under the warranty, send an e-mail to [support@newtableconcept.com](mailto:support@newtableconcept.com) with a description (and possibly a picture) of the defect.

NTC srl reserves the right to modify the product without any notice.